




TiVo Stream 4k Remote Control USER GUIDE

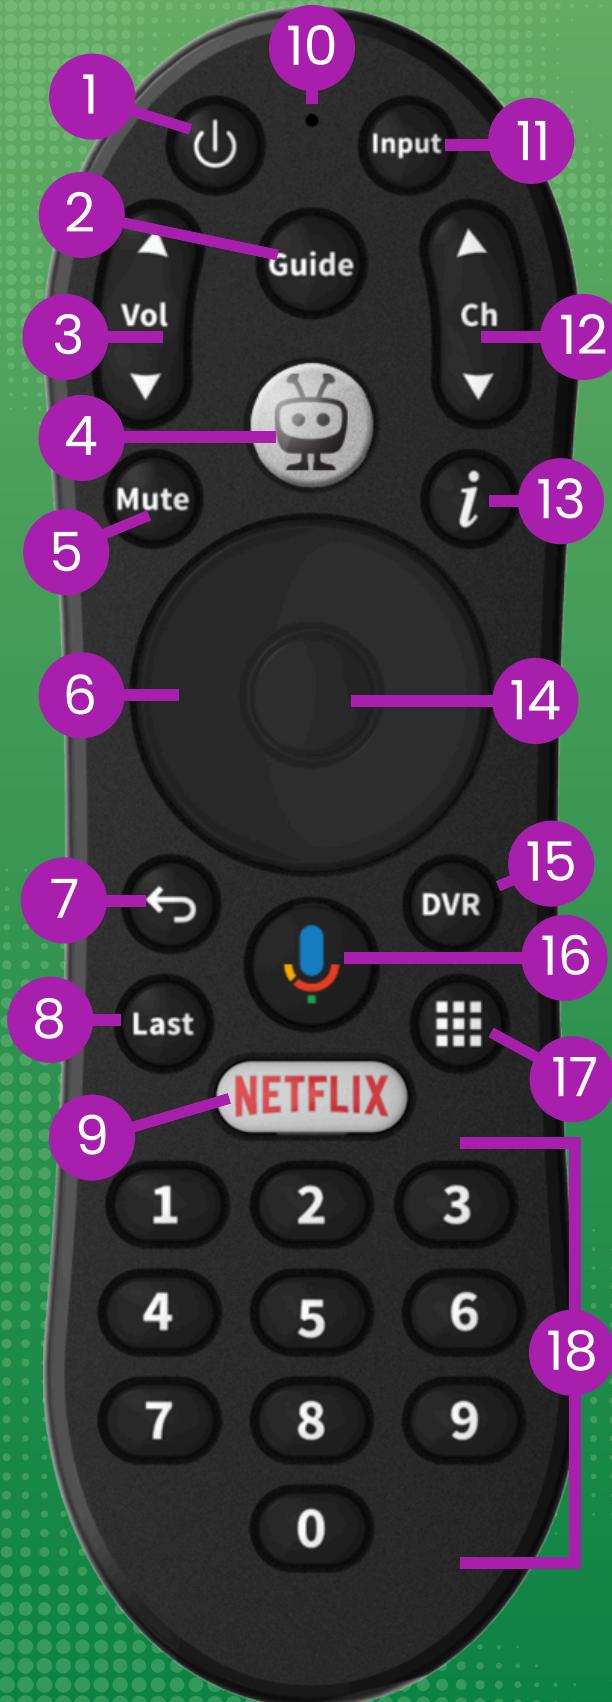

- 1 **POWER** turns the TV on or off
- 2 **GUIDE** takes you to the on-screen Guide
- 3 **VOL** controls the volume on your TV
- 4 **TIVO** takes you to main menu
- 5 **MUTE** turns the sound on or off
- 6 **CONTROLLER** navigates using **UP, DOWN, LEFT OR RIGHT** areas
- 7 **BACK** opens the main menu or returns to the previous screen
- 8 **VOD** go to on video on demand where you can browse, rent or watch movies
- 9 **NETFLIX** launches the Netflix app
- 10 **MICROPHONE** for Voice Search
- 11 **INPUT** selects input for your TV
- 12 **CH** changes the channels up and down
- 13 **'i'** shows more information about what you're watching
- 14 **OK** in the center of the Controller, accepts the current section
- 15 **EXIT** leave app to go to main menu
- 16 **VOICE SEARCH** find your shows.
- 17 **APPS** takes you to your apps
- 18 **NUMBER BUTTONS** Enter numbers (e.g., channel numbers or Parental Control PIN)