



Amino Amigo 7X REMOTE GUIDE

1 TV INPUT SOURCE SELECT

Changes video input on TV if remote is programmed with a TV infrared code.

2 TV/AUX POWER/STANDBY

Powers on or off TV if remote is programmed with a TV infrared code.

3 COLOR NAVIGATION

RED: Accesses recorded and scheduled show

GREEN: Access "All Shows"

BLUE: Access "All Movies"

YELLOW: Access "Live TV"

4 'A' BUTTON

Accesses replay of shows on current channel.

5 DVR FUNCTIONS

Pause/plays, fast-forwards/rewinds, stops, and records shows and movies.

6 APPS

Accesses all Apps downloaded to the TV

7 NAVIGATION AND OK

Navigation through the TV Now platform. Press 'OK' to make a selection

8 BACK

Returns to the previous menu or state within current APP. From live video, this key opens the Main Menu

9 VOLUME (UP OR DOWN)

Increases or decreases volume levels on your AUDIO DEVICE(S).

10 CHANNEL SELEST AND TEXT ENTRY

Enters channel numbers in the GUIDE or full screen video. Also used to manual text entry.

11 INFORMATION

Accesses program information and starts a recording.

12 SEARCH

Searches for programs using microphone voice search, text-field, or quick search.

13 INFRA-RED (IR) WINDOW

Communicates with TV and Amigo 7x box.

14 MICROPHONE

Recognizes voice commands for voice search.

15 STB POWER/STANDBY

Switches STB power on or into standby or off mode.

16 'B' BUTTON

Launches menu of recently accessed programs and channels

17 'C' BUTTON

Displays settings.

18 ELECTRONIC PROGRAM GUIDE

Launches the CHANNEL GUIDE (EPG) within the App.

19 HOME

Launches Android TV main menu, including access to Apps.

20 GOOGLE ASSISTANT

Launches voice-based Google Assistant search

21 CHANNELS/PAGE UP AND DOWN

Selects previous and next available channels

22 GOOGLE ASSISTANT

Launches voice-based Google Assistant search

23 SUBTITLES/CLOSED CAPTIONS

Turns on/off subtitles and closed captions

24 LAST CHANNEL RECALL

Displays menu of recently accessed channels.

25 LOW BATTERY WARNING LED

Turns on when batteries need to be changed

